

CompuTrace[®] Design Suite QUICK START GUIDE



The Heat Tracing Specialists®

Corporate Headquarters:100 Thermon Dr • PO Box 609 San Marcos, TX 78667-0609 Phone: 512-396-5801 • 1-800-820-4328 For the Thermon office nearest you visit us at . . . www.thermon.com ISO 9001



CompuTrace[®] Design Suite QUICK START GUIDE

Introduction

Welcome to the new and improved CompuTrace Design Suite. Follow the quick start guide to begin creating electrical heat tracing circuits for piping. Thermon has set the standard in heat tracing design software with the ability to include multiple segments into one connection. CompuTrace Design Suite is now available worldwide.

Starting a New Project





Step 1: Open CompuTrace





Getting Started

Introducing a new interface to reflect a new and improved approach. The screen is divided into four logical areas: Circuit Manager, Segment Definition, Circuit, and Segment.

1. CompuTrace[®] Window Overview



2. Circuit Manager Window

Located at the top of the Circuit Manager Window, The Toolbar Menu controls much of the organization related to the project.



3. Starting A New Circuit



4. Segment Definition Window

Used to define the segments that make up the circuit. Right clicking on the nodes (interactive boxes) can add new segments or re-define existing ones. This window is where you will see a graphic representation of the circuit and see the components associated to it.



Segment Definition Window. This allows you to copy, delete, and move the segment to a new circuit.

6. Segment Window

Input values associated with each segment. The values can change between the multiple segments. Pipe size/length, Insulation specifications, ambient conditions are examples of segment level variables.



can be used to sort

BOM at the segment level (Module/Work Package/Area). It also allows the user to select a specific heater.

Since inputs such as pipe size, insulation specifications, ambient conditions, and heater selection can change from segment to segment, the performance characteristics are determined for each segment.

5. Circuit Window

All inputs that effect the entire circuit or connection are on this corner of the screen. Analysis type, voltage, breaker size/type, control methods are examples of inputs that cannot vary by segment

			CONTRACTOR OF AND ADDRESS		
Analysis Type	100		Aver Charlotten		
Temperature Hanteriance			Ores D	dnary	
Dechnal			law. N	£199	
	Contraction of the second second	1.	our S	4	
ruhage	230	had.	5-Cao	8.	
Nater Vallage	130	100	Autogethei Term.		×
Crout Bealer Site	18	A.	Allocation Options		
	c .	1.	T Also fur sing		
Chait Broker Tige					
Al reater Sets 7	is Single Brooker		Taxantal or Carden		
	is Single Brooker		Tengensiure Control Type	Pay Serving	
 All mater Sets 1 Extended Dealer 	is Single Brooker			Ppe Serong Segment 3	
Al Heater Sets T Sets Al Heater Sets T Sets Al Heater Sets T	is Single Brooker		Type	and the second sec	•
C Individual Denies	is Single Breaker In Per Heater Set	-	Type Server Segment	Segment 3	

The Heater Information tab contains the variables that define a connection. Pipe type, exposure or max product temperatures, and heater types are examples of connection level variables.

Nati Sala	Made Tax
Ine 22 C () () () () () () () () () () () () ()	Constant Constant Frankis Constant Cons

7. Circuit Design & Results

After completing the data entry, click the "design active circuit" button to view your results. When you have multiple undesigned circuits, you can select the "design changed circuits" button to design more than one circuit at a time.



There are four visual icons that lead the user through the design process. Design results are explained in both the circuit and segment result tab.



Once you have a successful design, you can generate a bill of materials and multiple reports with the options in the reports tab.