


ThermoTube® & TubeTrace® ... Product Selection Chart

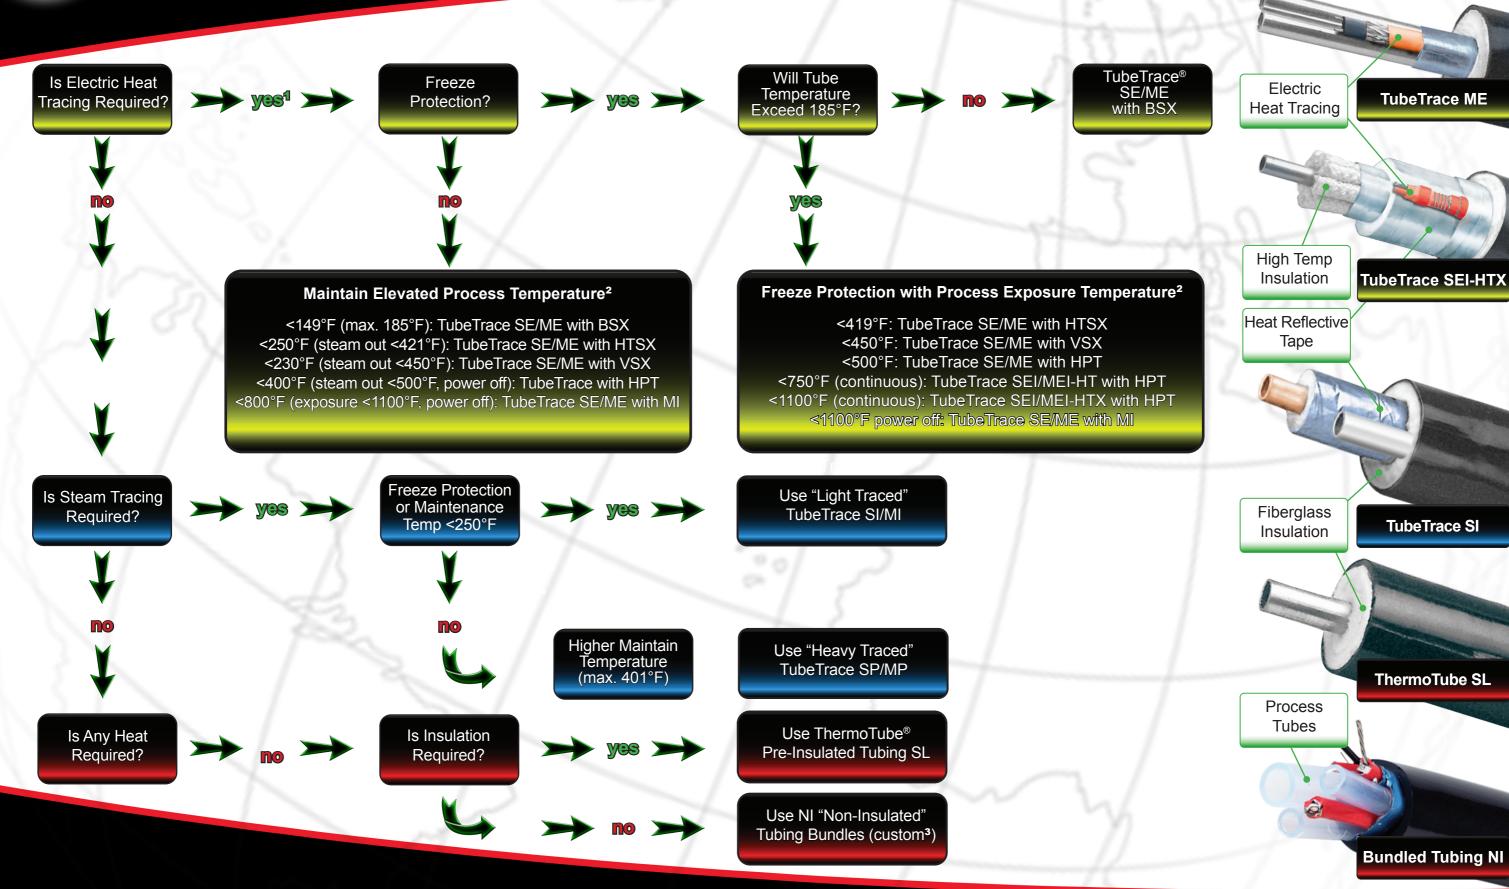

^{1.} The values are for estimating product selection and not for design. Visit www.thermon.com and download CompuTrace-IT for TubeTrace design. For more detailed descriptions of tubing and heat tracing options, refer to the TubeTrace legend, Form CLX0039.

^{2.} For process and/or exposure temperatures between 400°F and 500°F, "XINS" extra insulation will be required.

^{3.} Many custom bundles are available for different applications, such as Continuous Emissions Monitoring Systems (CEMS) as well as other analytical applications. Contact Thermon for details.